



White Devil #12421-5

Thank you for purchasing the White Devil electronic call. To see more Lucky Duck™ products please visit your local Sporting Goods dealer or online at www.luckyduck.com.

Directions for use: Unpack the box and make sure all parts are present.

- 2 – White Devil Electronic Call
- 1 – LD3X White Devil Remote Control
- 2 – SD Card (One installed in each call)
- 2 – Rechargeable Battery and Charger (One installed in each call)

Battery Installation: The call includes a 12 volt 3,700 mAh lithium-ion battery and charger. The battery compartment is located on the bottom of the call. Simply remove the battery cover, plug the battery into the call, set the battery in the battery compartment and replace the battery cover. The remote control uses 3 AA batteries (not included). Remove the battery cover on the back of the remote control and install the batteries.

Electronic Call Operation: The White Devil has three channel frequencies which allow a different sound to be played on each channel. **IT IS CRITICAL THAT EACH WHITE DEVIL HAS THE EXACT SAME FOLDERS, SOUND FILES AND SOUND ORDER ON EACH SD CARD.** See the Sound Management Section of the instructions for more information. This product comes from the factory with two caller units and one remote. Additional caller units may be purchased separately. Turn one speaker unit to channel 1 by sliding the selector switch on the back of the call to channel 1. A red LED light on the back of the call will illuminate when the power is on. Hold down the power button on the remote control. The remote will turn on. The remote screen will display “Finding Caller”, “Waiting”, “Communication OK” while it searches for the caller. Once connected to the caller the remote screen will be displayed. **DO NOT PRESS ANY BUTTONS WHEN REMOTE IS SEARCHING FOR THE CALLER.** Once the first call has been synced with the remote, turn on any remaining calls to the desired channel (1, 2 or 3).

Remote Control Operation:

Sound Selection – Use the up/down arrows to highlight the folder you want to select. Press the play button to select the folder. Use the up/down arrows to highlight the sound you want to play. Press the play button to play the sound. Holding the up/down arrows down for 1 second will cycle through the folders/sounds faster.

Play Different Sounds on Multiple Speakers – The White Devil has three channel frequencies. A unique sound can be played on each channel. Therefore, you could have three different sounds playing at one time if you have three or more caller units. **To play sounds on different channels, the first call turned on must always be set to Channel 1.** Turn on the other calls to channel 2 or 3. Press the CH (channel) button on the remote to switch between which channel the remote is controlling. At the bottom of the remote screen are CH1, 2 and 3 icons. Whichever channel icon is highlighted will identify which channel is being controlled by the remote. On CH button 4th push, all the channel icons will highlight, then all three channels can be controlled at once. Pressing the CH button multiple times scrolls through each channel selection. For example, set one call to channel one and a second call to channel two. When you highlight channel one on the remote all remote functions will control caller one. When the user presses the CH button the remote will cycle to channel two. Caller one will continue to play the sound it was playing when the user switched the remote to channel two. Now the user can control the caller that is on channel two. If the user selected and played a different sound on channel two than was playing on channel one, each caller unit would be playing a different sound.

Volume Selection – Use the vol- and vol+ buttons to lower or increase the volume level. The volume level ranges from 1 to 32. Holding the vol- or vol+ buttons for 1 second will raise or lower the volume level quickly. See Gain Control for additional volume settings and control.

Back Button – Use the “B” button to return to folders from the sound list. The back button is your “click to go back” button.

Recall Button – The recall button will play the previous sound.

Stop All Button – Tap the power button to stop all sounds, auxiliary, and remote screen.

Display Screen – The remote display screen includes information on the top 2 lines and the bottom line.

Top Line (Left to Right)

- Stand timer which starts from zero when the remote is turned on
- Volume level from 1 – 32
- Remote control battery level indicator

Second Line (Left to Right): Each icon will be highlighted when in use

- AUX indicates if the auxiliary function is turned on
- SD indicates if the SD card is installed and synced to the remote
- Signal indicates the strength of the signal between the remote and caller
- Speaker indicates if a sound is being played

Bottom Line: Shows which brightness mode is selected

Remote Screen Brightness: The White Devil features 3 different screen modes to adjust brightness depending on the outside light level. Simply press and hold one of the three remote screen brightness buttons on the left side of the remote for different modes. The top "D" button is for "Day" mode, the middle "DD" button is for "Dawn/Dusk" mode and the bottom "N" button is for "Night" mode. To adjust brightness level within a screen mode, tap any screen mode button, then use the volume +/- buttons to adjust the brightness to desired level.

Remote Control Distance: The White Devil utilizes industry-leading remote technology which does not require a line of sight between the remote and the caller up to at least 100 yards. Depending on conditions, remote distance may be significantly greater than 100 yards.

Favorite Buttons: F1-F3 on the right-side of the remote are designed to store your three favorite sounds for quick access when hunting. Press the F1 through F3 button once to play the programmed sound at the predefined volume level.

Program F1 through 3 – Simply highlight the sound you want to program as a favorite and adjust the volume to your preferred level. Hold down the corresponding F1 through F3 button. The highlighted sound will flash on the display screen confirming the programming is complete. IF THE F1 BUTTON WILL NOT PROGRAM, TRY PROGRAMMING F2, or F3 FIRST AND THEN PROGRAM F1.

Gain Control: The White Devil is a four-stage gain control function caller, allowing maximum control of your volume and sound quality. The gain on this caller has four settings (1-4). One being the lowest (quietest) and four being the highest (loudest). Whenever the caller is turned on it is set to gain level of "3". By adjusting the gain, you can control the power running through the amp. You will notice a difference in the volume of the call between level 1 and level 4. Certain sound frequencies sound much better at a high gain, and others sound better at a low gain. Knowing you may be adding your own sounds to this caller, adjusting the gain may be useful depending on the sound being played since each sound recording is different. Adjusting the gain may also be useful depending on the hunting situation. For example, turning the gain to level 4 in strong wind conditions may be beneficial even if the sound quality is reduced (i.e. distortion).

Adjust Gain – Press the G key to cycle through the gain levels. The gain level will display on the bottom of the display screen as "Level __"

Auxiliary Function: The White Devil is designed with an auxiliary function which allows a separate decoy to be controlled remotely by connecting a compatible decoy (not included) to the back of the caller using a 3.5mm cord (not included). Simply plug one end of the 3.5mm cord into a compatible decoy and the other end into the auxiliary port on the back of the caller. Turn on the compatible decoy and the caller/remote. The auxiliary button "AUX" on the remote will now turn the compatible decoy on and off. The AUX icon on the top of the display screen will be highlighted when it is used.

Sound Management: The White Devil comes preloaded with 100 live animal sounds organized in 22 folders for quick access. These sounds have been professionally recorded by Lucky Duck and The Verminator, Rick Paillet. We firmly believe this is the best sound library on the market. The 100 preloaded sounds have the extension ".LD". They will only play on Lucky Duck electronic calls. **Any reproduction of these sounds is strictly prohibited.** Go to www.luckyduck.com for additional sounds to purchase.

Add/Remove Sounds: Use of a computer with Windows Operating System is strongly recommended. We strongly recommend you do NOT use Mac Operating Systems for sound file management. The White Devil features an industry leading wireless 2-way communication system between the remote and caller. This makes synchronizing the caller to the remote extremely easy.

1. Locate the SD card on the back of the call under the black cover. Press the SD sound card in to eject the sound card and remove the SD sound card from the back of the caller.
2. Add or remove the folders and sounds on the SD sound card using your computer. View the files just like you would view files on a standard camera SD card. **IT IS CRITICAL THAT EACH WHITE DEVIL HAS THE EXACT SAME FOLDERS, SOUND FILES AND SOUND ORDER ON EACH SD CARD. THE SD CARDS IN EACH CALL MUST MATCH EXACTLY. THE REMOTE/CALLER SYNCHRONIZATION WILL NOT FUNCTION PROPERLY IF SD CARDS ARE NOT PRECISELY MATCHED.**
3. Reinstall the SD sound card into the caller (top side or label side of the SD card should face the left side of the caller when reinstalling).
4. Turn on one caller to channel one and the remote control and let them synchronize with each other. The screen will show "Updating" after sound files have been changed or moved. Most syncs will take 5-30 seconds. The call and remote will only synchronize when there are changes on the SD card. As stated in the "Electronic Call Operation" section, the remote screen will then display "Finding Caller", "Waiting", "Communication OK" while it searches for the caller. Once connected to the caller the remote screen will be displayed. **DO NOT PRESS ANY BUTTONS WHEN REMOTE IS SEARCHING FOR THE CALLER.** Once the first call has been synchronized with the remote, turn on any remaining calls to the desired channel (1, 2 or 3).
5. **Do not have multiple callers powered on and set to channel 1 during updating. We advise that callers are updated and synchronized after sound changes one at a time, with other callers powered off.**

It is important to note the maximum number of sounds is 2,000 and the maximum number of folders is 32. There can only be one level of folders. You cannot create a folder within a folder. The file names can be as long as you would like but the display screen will only show the first 20 characters. The caller will play .LD, and .mp3 files. **IT IS CRITICAL THAT EACH WHITE DEVIL HAS THE EXACT SAME FOLDERS, SOUND FILES AND SOUND ORDER ON EACH SD CARD.**

Charging: The White Devil comes standard with a 12 volt, 3,700 mAH lithium-ion battery pack. The charging system is not to be used with any other types of battery packs or chargers. Use of any other battery packs or chargers voids all warranties.

To Recharge the 12 Volt Lithium Ion Battery (two methods)

Caller Port:

1. Simply plug your charger into the charging port located on the back of the call. It should be the middle port under the black cover.
2. Plug the charger into a 110V wall outlet. The LED light on the charger will turn red when charging and green when fully charged. It should take 3 hours to recharge the battery.

Battery Directly:

1. Remove the battery from the caller and unplug the battery connector.
2. Disconnect the charger adapter about 6 inches back where there is a black square plug.
3. Use the adapter to connect the charger to the battery.
4. Plug the charger into a 110V wall outlet. The LED light on the charger will turn red when charging and green when fully charged. It should take 4 hours to recharge the battery.

Care and Maintenance

1. The White Devil is not waterproof. Take caution to keep rain and snow away from the caller and remote. If the caller or remote becomes wet, make sure to dry it off/out.
2. There is a small drain on batteries even when the power is off. It is recommended to remove the batteries from the remote and disconnect the battery pack from the caller between hunts to extend battery life.

Troubleshooting:

1. If the caller or remote does not seem to be operating properly or the sync function does not seem to be working after changes have been made to the SD sound card, turn the caller and remote off and remove the batteries from each unit. Reinstall the batteries and turn the remote and caller back on as described in the operations section.
2. A reboot function is available to resync the remote and call if the connection between the two is lost while hunting or the sound files are not displayed correctly. Simply press and hold the "auxiliary" button to reboot the remote and resync. The remote screen should turn blue and go through the "Finding Caller" "Waiting" process as described in the Electronic Call Operation section above. **DO NOT PRESS ANY BUTTONS WHEN REMOTE IS SEARCHING FOR THE CALLER.** Each caller reboot must be done separately, with one call powered on per channel. If multiple calls are on one channel, turn all but one off. If one caller is on channel 1 and a second caller on channel 2 or 3, begin with channel one reboot, then move to the next channel. If both callers are powered on and on channel one, it will not do an update.
3. If callers are not playing the correct sound as what was selected on the remote, make sure the SD cards in each call match exactly. Perform a hard reboot as described in #2 above.

Lucky Duck™ warrants this product against all manufacturing defects for a period of 1 year from date of purchase. Proof of purchase is required. Abuse of the product (water damage, dropped, mistreatment etc.) is not covered. Please return and exchange the defective unit to the store where you purchased the product. If the store will not accept the return, please email or call customer service at customerservice@luckyduck.com or 715-338-3183.



The White Devil Remote Layout

